



Fig 503/175 THREE-WAY ESCAPE VALVE

Installation

1. The connection marked "Boiler" must be fitted directly to the boiler or calorifier with no intervening stop valve.
2. The connection marked "Vent" or "To Flow" should be fitted with a vent pipe or connected to the vented flow pipe. There must be no stop valve fitted between the valve and the open end of the vent pipe.
3. The connection marked "Drain" or "To Waste" should be fitted with a short pipe leading to an open drain or tundish.

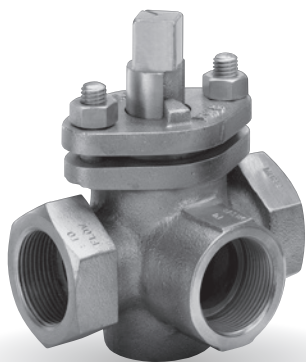

NABIC Fig 175 Three-Way Escape Valve

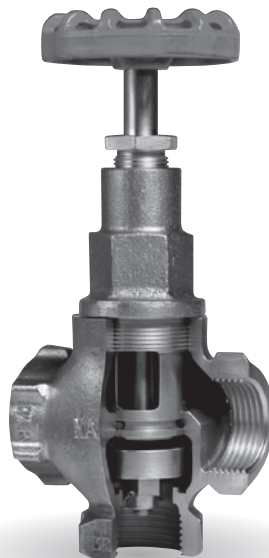

NABIC Fig 503 Three-Way Escape Valve

INST-1413 Iss3 side 2 attached as page 2

NABIC™

46-48 WILBURY WAY, HITCHIN, HERTFORDSHIRE, SG4 0UD
 Tel: +44 (0) 1462 443 278 Fax: +44 (0) 1462 443 127
 E-mail: nabicsales@cranebsu.com Web: www.nabicvalves.com

Every effort has been made to ensure that the information contained in this publication is accurate at the time of publishing. NABIC assumes no responsibility or liability for typographical errors or omissions or for any misinterpretation of the information within the publication and reserves the right to change without notice.

N-FIG503_175_1215
 IOM_1413_1/2